



Electric Vibrating Knife

Warning

- Be sure this knife is plugged into a properly grounded outlet. Do not use for any other purpose other than the uncapping of honey.
- Fire and explosion hazard. Appliance must not contact flammable materials and must not be used if vapors are present.
- Hazard of electric shock! Do not immerse in water. Appliance must be connected to a properly grounded electric outlet supply 120V AC.
- Burn hazard! Metal parts of knife can cause burns if allowed to contact skin. Be sure knife has cooled before touching. Do not leave unattended.
- Disconnect power when not in use



CARE OF YOUR KNIFE: When uncapping is finished, unplug electric knife. After knife has cooled, clean all honey and wax off with a hot, damp cloth. Before storing, be sure knife is clean and dry; you may wish to wrap in paper. Store in a dry place.

Operating Instructions

Before plugging your knife into a properly grounded outlet, read the caution and warning above.

- To begin, turn control box ON and control dial to (4). As the blade heats the dial may be adjusted for more or less heat. When you are not using the knife for prolonged periods, the control should be turned OFF.
- Be sure the floor where the operator is standing is DRY
- Be sure the cord to the knife does not become entangled or rub other objects which will interfere with the uncapping operation.
- To start uncapping, use the top bar and the bottom bar as a glide. The frame should be held so that the top bar and bottom bar are at right angles to the knife, holding onto the ears of the top bar and keeping your fingers clear of the knife at all times. Feed it up across the blade, then turn the frame over and repeat the process.